ASSEMBLY INSTRUCTIONS FOR SCREEN HOUSE

1. Unpack tent and remove frame from package.

2. Check that frame sections are as shown in diagram.

3. There are three ridge spacers: The shortest spacer is for the inside center only.

4. Center assembly sections fit inside the tent, outer assembly sections fit outside of tent.

5. Stake out base of the tent making sure that base is properly squared. Make sure that screenhouse is zipped closed during this procedure.

6. Place the outside ridge elbow sections through loops on ridges, mating the two elbow sections with the outside ridge spacers.

7. Mate the upper and lower outside legs and insert these into the outer ridge elbows. To raise the outside sections of the screenhouse, simply raise the outer assembly sections in an outward and upward movement and place the lower end of the outer leg into the ground approximately three feet from corner of screen-house. Repeat this operation on the other side.

8. Mate the two remaining ridge elbows with the inside ridge spacer as shown in diagram. Insert the inside middle leg into the inside lower leg by passing the inside middle leg through the adjustable lock as shown in diagram. Mate with inside upper leg.

9. When both sides are raised, go inside the tent and insert the inside leg sections into the ridge elbows and raise to eye level. Secure both center assembly ties at elbows. Extend center assembly to desired position.

10. Tie all tie tapes on outside to front of elbows. Adjust corner poles as necessary. Do care not to overstress the screen panels by overextending the frame.

NELSON / WEATHER-RITE

Fuqua

Secaucus, New Jersey • Lenexa, Kansas • Los Angeles, California

PRINTED IN KOREA

MATERIAL CHECKLIST

Part No.	Description	Pcs.
A	Ridge Elbow Section	6
B	Outside Ridge Spacer	2
C	Inside Ridge Spacer	1
D	Outside Upper Leg	4
E	Ouside Lower Leg	8
F	Inside Upper Leg	2
G	Inside Middle Leg	2
H	Inside Lower Leg	2

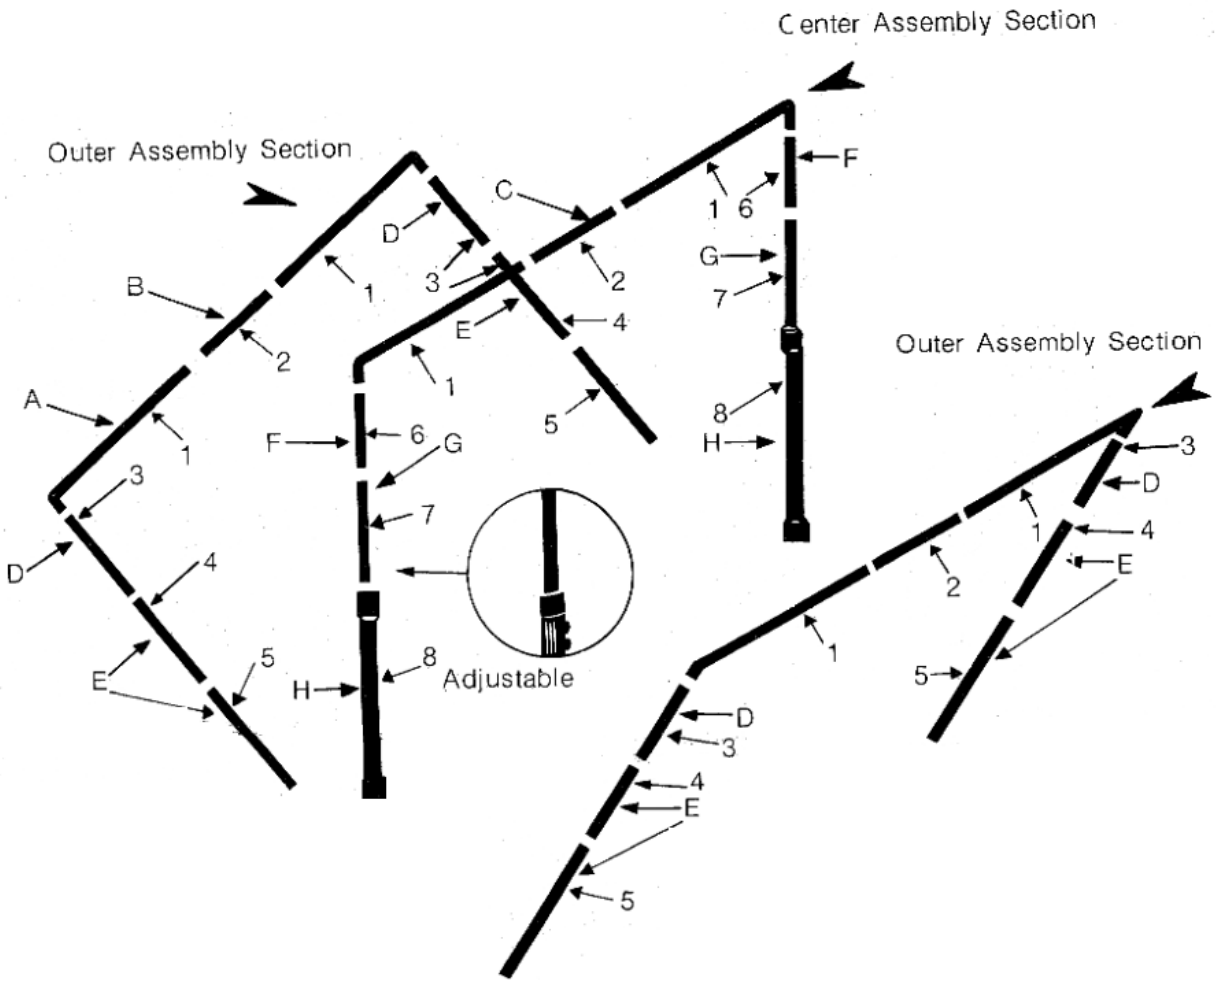

CAUTION: EACH OUTSIDE FRAME: BLUE NUMBER
CENTER MIDDLE FRAME: RED NUMBER.